
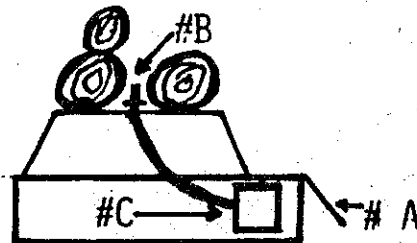
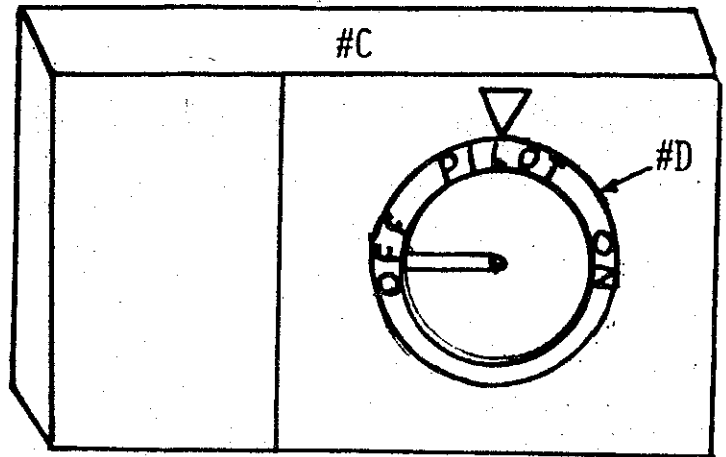


HOW TO TURN THE FIREPLACE GAS ON AND OFF

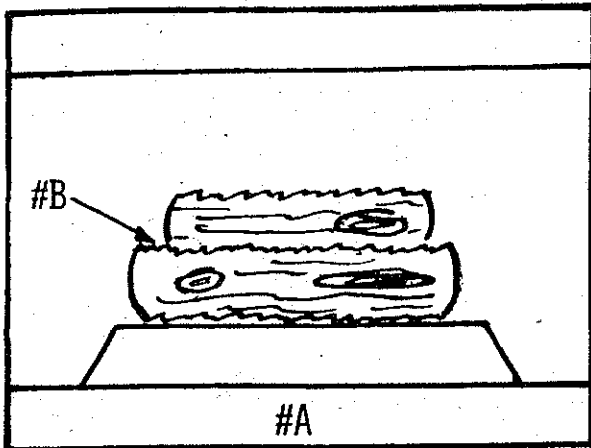

#A. AT THE BOTTOM OF EACH FIREPLACE, THERE IS A 3-INCH BLACK METAL HINGED FLAP WHICH LIFTS UP TO EXPOSE THE GAS VALVE (# C).

#C. ON THE FACE OF THE GAS VALVE, THERE IS A CIRCULAR KNOB, WHICH INDICATES "OFF", "PILOT" AND "ON".

#D. TO TURN ON: TURN THE CIRCULAR KNOB TO THE "PILOT" POSITION. PRESS THE KNOB IN AND HOLD IN FOR ABOUT 30-SECONDS WHILE HOLDING A LIT TAPER OR SMALL WAD OF PAPER AT THE "PILOT LIGHT" (#B) LOCATION, **IN BETWEEN THE LOGS** AT THE FAR LEFT END. RELEASE AND THEN TURN THE KNOB TO THE "ON" POSITION. LOCATE YOUR WALL FIREPLACE SWITCH AND TURN ON. LOGS WILL LIGHT AUTOMATICALLY. IF THEY DON'T LIGHT, CLEAN THE "PILOT LIGHT" (#B) WITH A SMALL BRUSH AND REPEAT THE STEPS ABOVE.

TO TURN OFF: TURNING THE CIRCULAR KNOB (#D) TO "PILOT" WILL SHUT OFF THE AUTOMATIC FIRE LIGHTING OF THE LOGS, BUT WILL KEEP THE "PILOT LIGHT" BURNING. TO SHUT THE GAS COMPLETELY OFF, TURN THE CIRCULAR KNOB (#D) TO THE "OFF" POSITION.